

# STRATASEAL HR


# HR-04

## CONCRETE DECK

## 002-NH V2

### Deck to Wall - Outside Corner

### SCALE: NTS

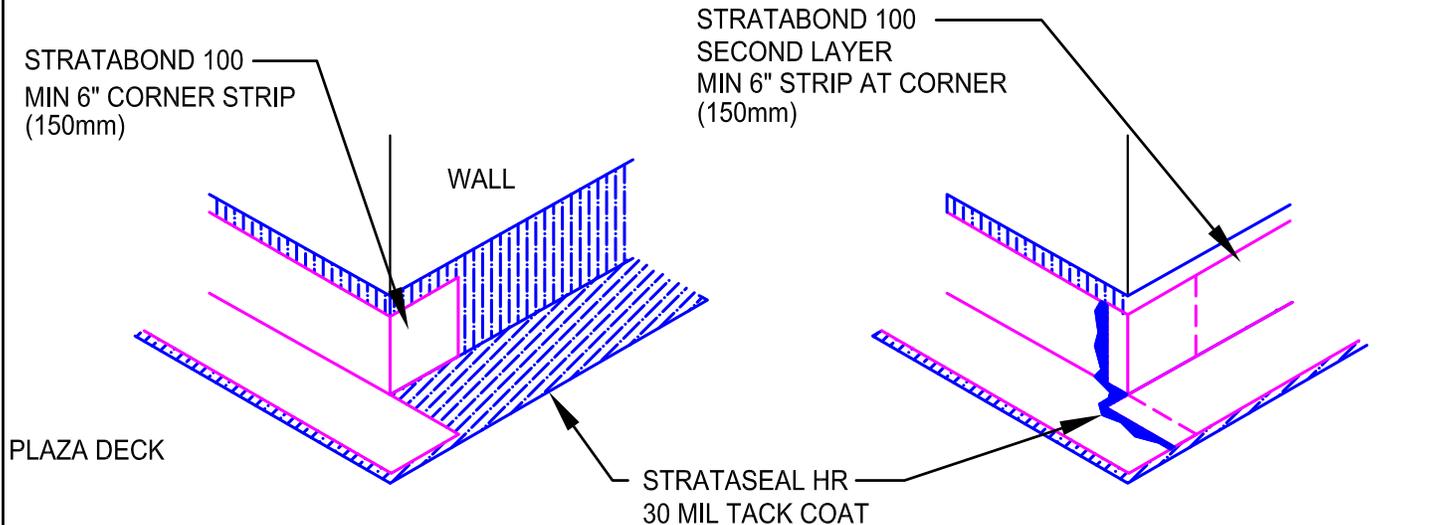

**STEP 1**

APPLY PRIMER AND INSTALL FIRST LAYER OF STRATABOND AS SHOWN

**STEP 2**

APPLY TACK COAT ON FIRST LAYER AT OVERLAP OF SECOND STRATABOND STRIP

**STEP 3**

STRATASEAL HR - 90 MIL THICK BASE LAYER OVER STRATABOND CORNER STRIP

This information is based on data and knowledge considered to be true and accurate. The information is offered for the users' consideration, verification, and requires project designer's approval before installation. CETCO does not warrant the results obtained and assumes no liability for the use of the information. CETCO waterproofing membranes are not intended to seal expansion joints; contact CETCO for expansion joint applications. This information is subject to change without notice.

**PROJECT NAME:**

**CETCO**<sup>®</sup>  
A MINERALS TECHNOLOGIES COMPANY

2870 Forbs Avenue, Hoffman Estates, IL 60192 USA  
tel 847.851.1800 [www.cetco.com](http://www.cetco.com)  
email: [detail.request@mineralstech.com](mailto:detail.request@mineralstech.com)

**DATE:**